

BP-TEK22 - ASSEMBLY MANUAL

PACKING LIST

Frame	pcs
Column	4
End pipe	4
Outer pipe	4
Connection pipe	4
Cable clamp	12
Rubber washer	16
Hole cap	16
Side beam	2
Control box / Hand control	pcs
Control box	2
Hand control	2
AC cable	2
Screws	pcs
Screw for motor house / Outer pipe, M6x16mm	16
Tailstock for connection pipe, M10x8mm	16
Screw for side beam, M10x12mm	8
Screw for tabletop, Ø5x20mm	28
Screw for hand control, Ø4x22mm	4

Tightening torque

Tailstock	Maximum 6Nm
Screw for motor house and outer pipe	Maximum 10Nm
Screw for side beam and tabletop	Maximum 10Nm
Screw for hand control	< 6Nm

Make sure all screws are tightened, also after a period of use!


Reset the desk before use

Press both up and down buttons at the same time for 3 seconds. Continue pressing the buttons until both columns are in lowest position. When finish reset, the control box makes a sound and the buttons can be released. Now the system is operational.


WARNING

Carefully arrange all the cables not to be damaged by tabletop screws.


Step 1

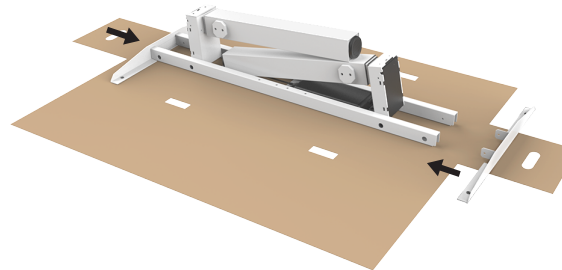


Step 3

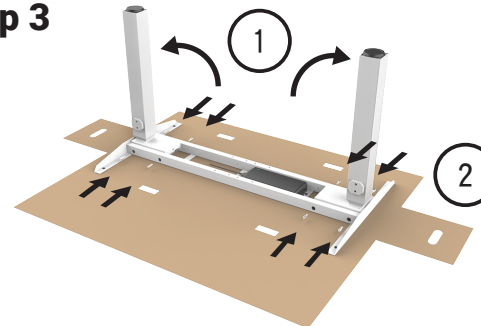

Step 4





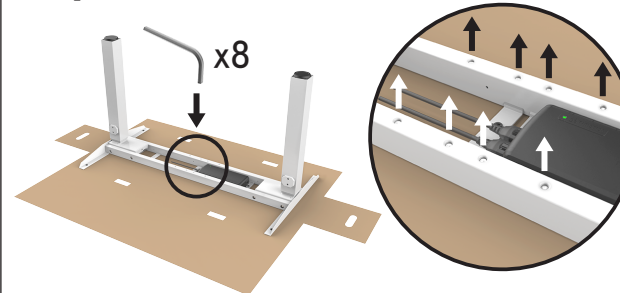


Step 2

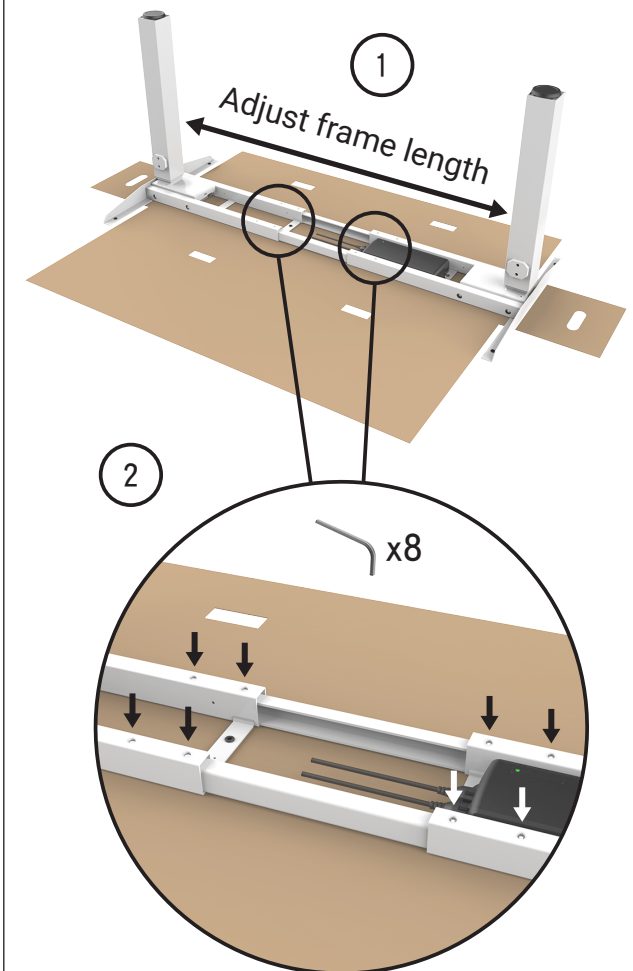

BP-TEK22 - ASSEMBLY MANUAL

Step 5

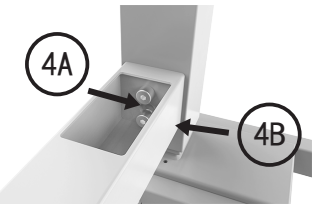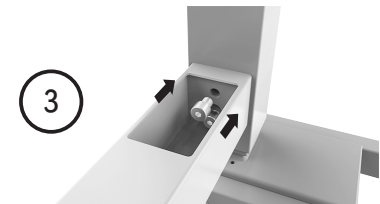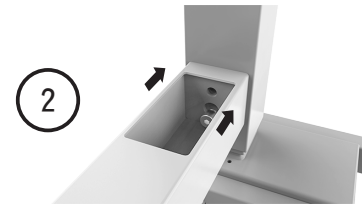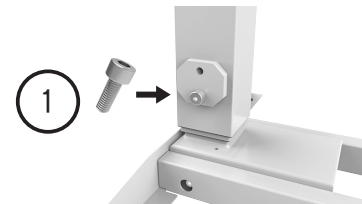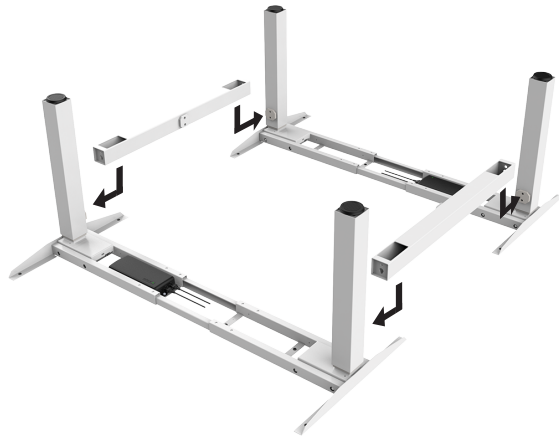

Step 6



Step 7



Step 8



x14 →



x2

